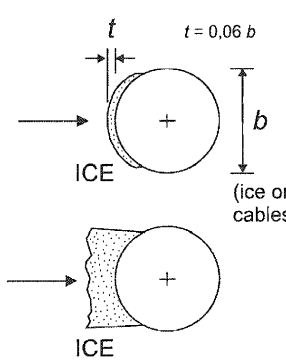
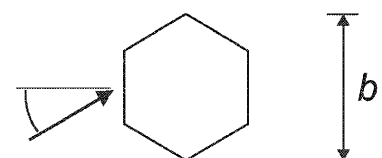
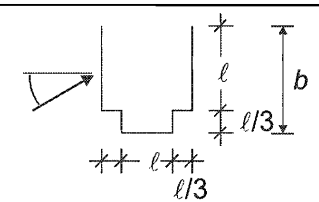

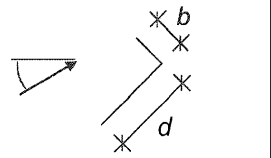
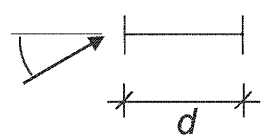
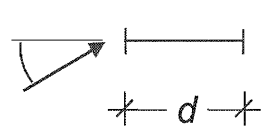
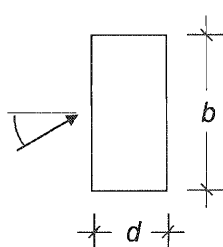

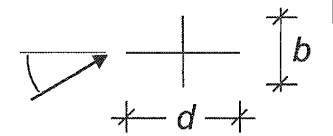
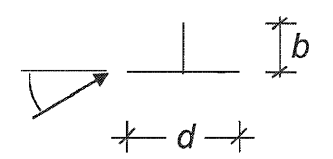


Table E.7 — Factor of galloping instability  $a_G$

Cross-section	Factor of galloping instability $a_G$	Cross-section	Factor of galloping instability $a_G$		
	1,0		1,0		
			4		
 <p>linear interpolation</p>	$d/b=2$	2		$d/b=2$	0,7
	$d/b=1,5$	1,7		$d/b=2,7$	5
	$d/b=1$	1,2		$d/b=5$	7
 <p>linear interpolation</p>	$d/b=2/3$	1		$d/b=3$	7,5
	$d/b=1/2$	0,7		$d/b=3/4$	3,2
	$d/b=1/3$	0,4		$d/b=2$	1
<p>NOTE Extrapolations for the factor <math>a_G</math> as function of <math>d/b</math> are not allowed.</p>					